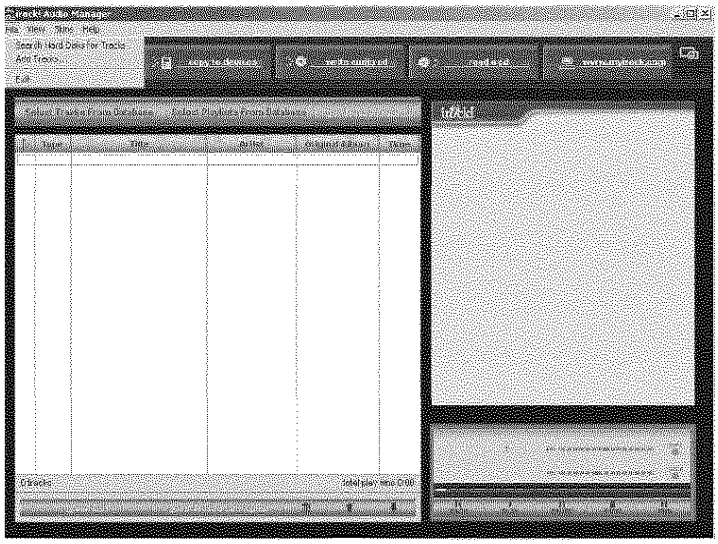

3. When the program opens up, click on **<File>**.

4. Highlight and click on **<Add Tracks...>**.

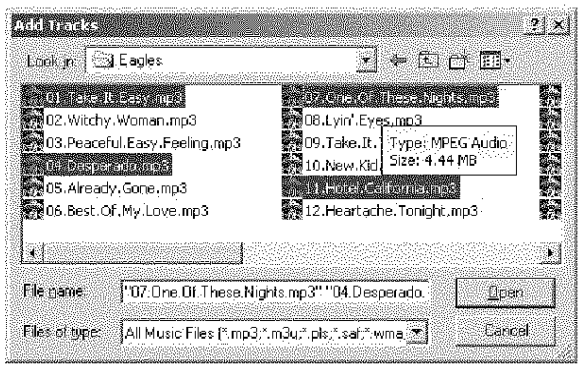

5. Click the **drop-down** arrow to search for tracks to transfer to your irock!™ digital audio player.

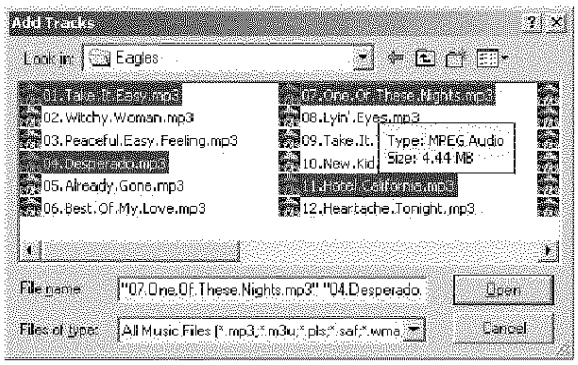

6. When you do find a track that you would like transferred, highlight the track, and click on **<Open>**.

If you would like to add more than one track to your playlist, highlight each track that you want by holding down the ***<Ctrl>*** *button, while you click on each track. This will add the track to your playlist AND try to add it to your database.*

7. However, if this window-pops-up, it indicates that the track chosen is already in the database.

You are now ready to transfer your tracks over to your irock!™ digital audio player.

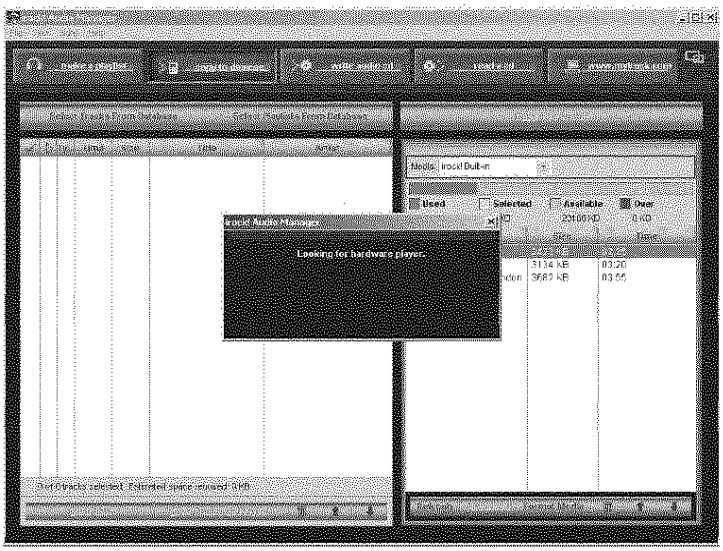

8. Click on the **<copy to devices>** button. This procedure will ensure that the PC is able to communicate with the irock!™ digital audio player.

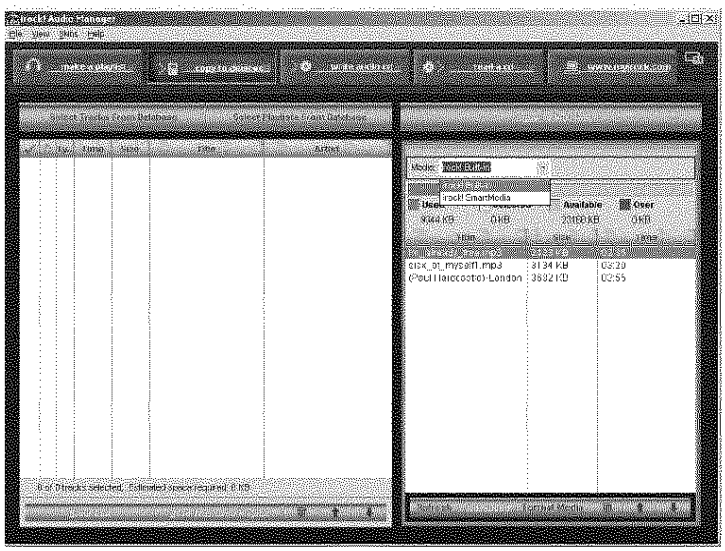

9. In the **Media**: menu, click the drop-down arrow This will give you two options. Highlight and click on the type of memory you would like the tracks to be transferred to. In this example, I chose **irock!™ Built-in memory.**

10. Click on **<Select Tracks From Database>**.

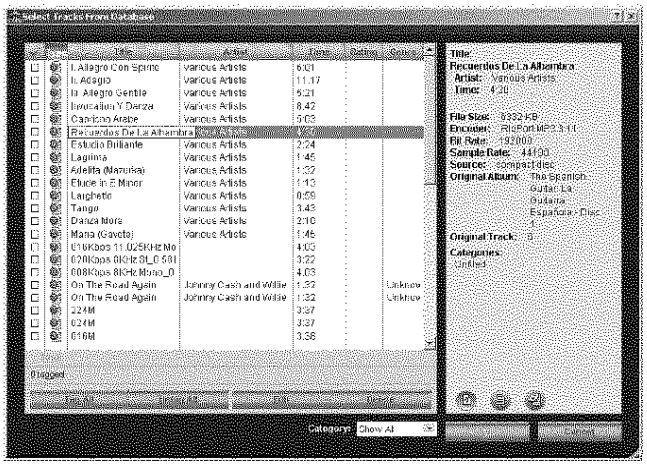

11. The **Select Tracks From Database** window will pop-up. All of the tracks that were successfully added to the database will show up in this window.

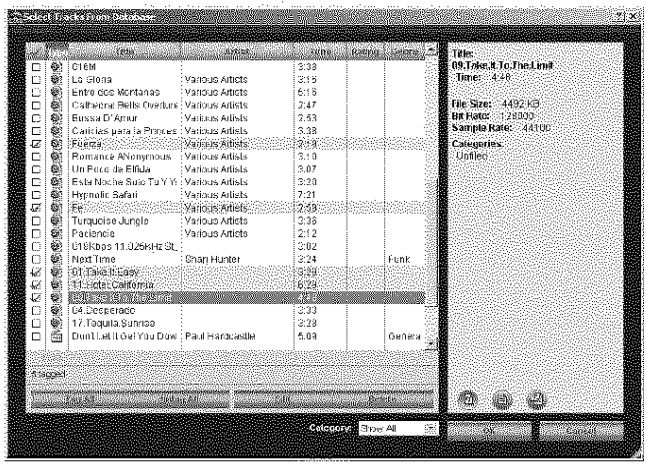

12. Check each track that you would like to transfer to the irock!™ digital audio player.

13. Click on **<OK>**.

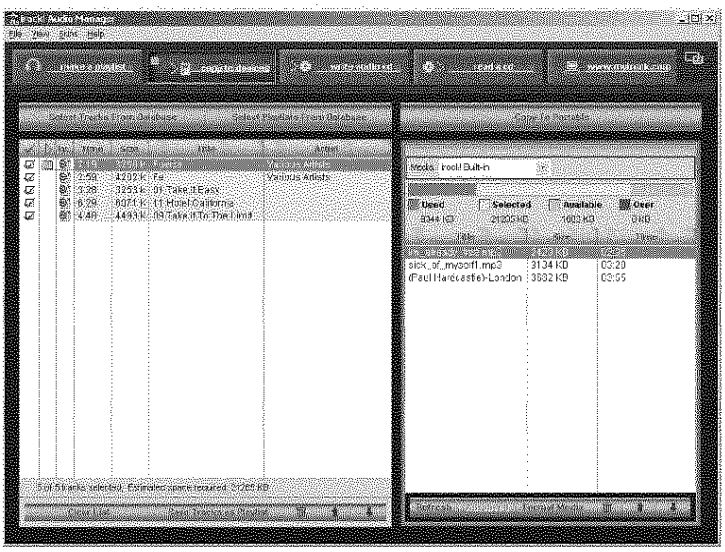

14. Click on the **<Copy to Portable>** button.

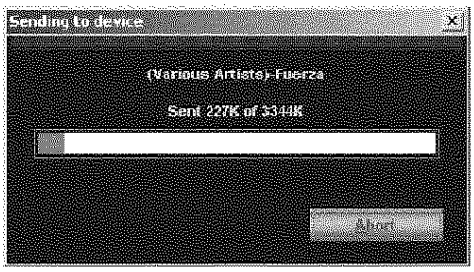

15. The **Sending to Device** window will pop-up for each track transferred to the irock!™ memory.

16. When all of the tracks have been successfully transferred, the following pop-up window will show up on your screen.

17. Click on **<OK>**. You are now ready to disconnect the USB cable using the instructions given in Chapter **6**. - **Disconnecting the irock!™ from the PC**. You are now ready to irock!™

For more details on irock!™ Audio Manager, please refer to the Help section of irock!™ Audio Manager.

Chapter 8 The irock!™ 500 Series Digital Audio Player : How To...

A. Turn the Power ON

1. Press in the **<Multi-Function Jog>** button once.

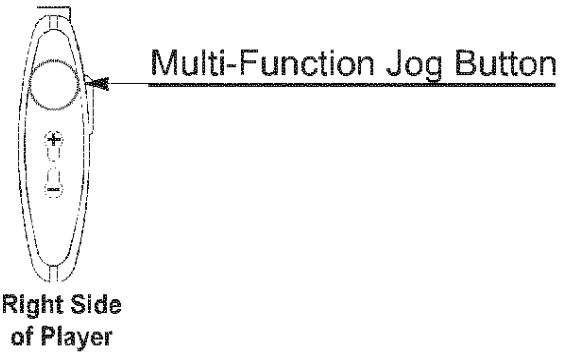

2. The LCD will turn on, which means the power is on.
Initially, all symbols and characters are displayed on the LCD. This is normal. During this time, the **number of stored tracks** is displayed and the LCD automatically switches to **Stop Mode**. Wait until the LCD completely switches to **Stop Mode**, before use.



When LCD first turns on

When it switches to **Stop Mode**

B. Play/Stop

1. Press and release the **<Multi-Function Jog>** button quickly to turn on the power (when the power is off).
2. Press and release the **<Multi-Function Jog>** button once more, and the track begins to play. (Given that there are tracks present either in the irock!™ Built-in memory or on an inserted SmartMedia™ card(SMC).

> Note
> *Press and release the **<Multi-Function Jog>** button during **Play Mode** and the music stops.*
> ***Stop Mode** operates the same as **Pause.***
> *If there is no operation for one minute in the **Stop Mode**, the power automatically turns off.*

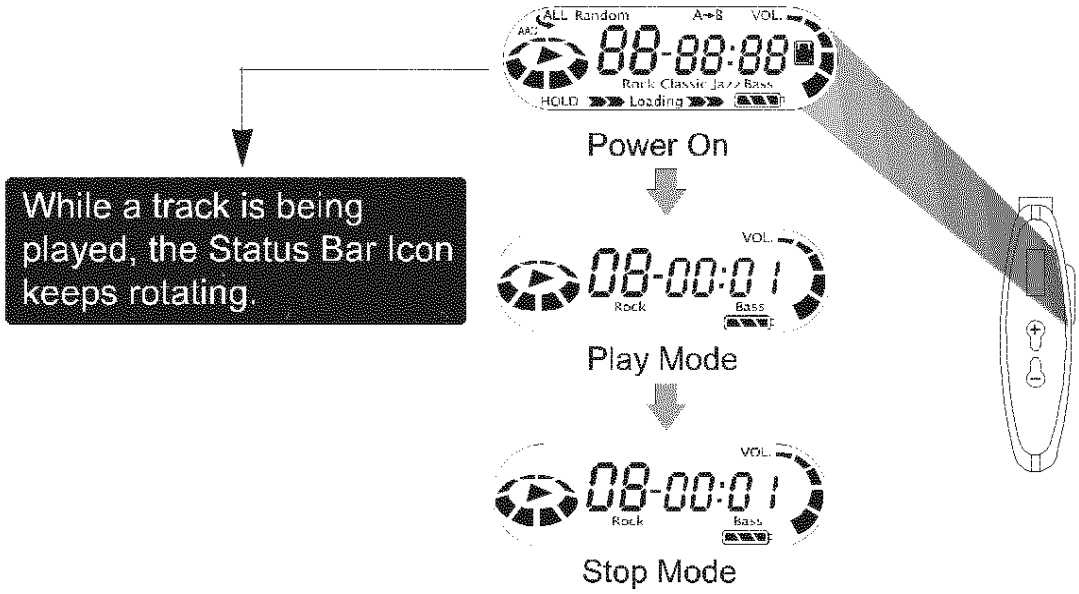

C. Adjust the Volume

1. Press in the **<VOLUME (-)/(+)>** button in **Play Mode**, and you can control the volume.

*You can adjust the volume level from **00(Mute)** to **22(Maximum).** Press and release the **<VOLUME (-)/(+)>** button quickly, and the volume is adjusted in an increment or decrement of one step. Press in and hold the **<VOLUME (-)/(+)>** button, and the volume is adjusted continuously until the button is released.*

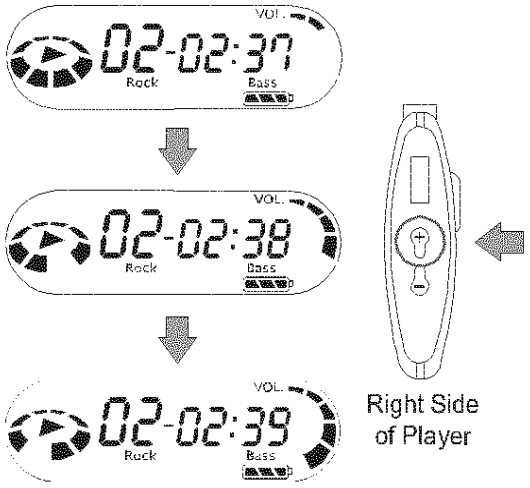

When the volume is increasing.

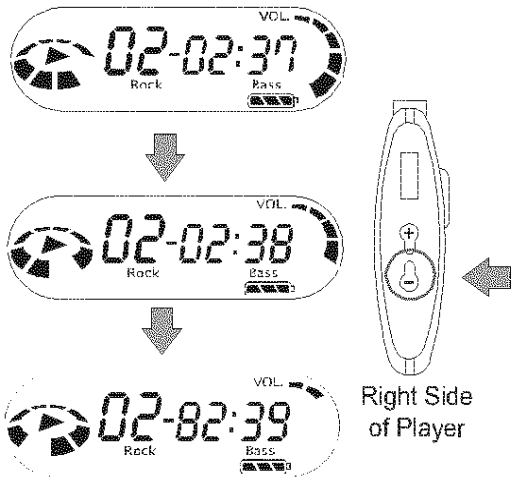

When the volume is decreasing.

D. Turn the Power Off

1. Press in and hold the **<Multi-Function Jog>** button in the **Play/Stop Mode** for three seconds adn the LCD and power will be turned off.

If you are not going to use the irock!™ digital audio player for a long time, it is recommended to remove the batteries.

E. To Search Other Tracks

1. While in **Play Mode** or **Stop Mode**, quickly pull up and release the **<Multi-Function Jog>** button to advance to the next track one-by-one.
2. While in **Play Mode** or **Stop Mode**, quickly push down and release the **<Multi-Function Jog>** button to move to the previous track one-by-one.
3. While in **Stop Mode**, pull up and hold the **<Multi-Function Jog>** button to advance through the tracks consecutively.
4. While in **Stop Mode**, push down and hold the **<Multi-Function Jog>** button to move back through the tracks consecutively.

*During search, the track proceeds eight times faster than normal playing time. It is indicated with time but there is no sound during this operation. If you rewind a track in **Play Mode** after the track has been played for 5 seconds or more, the current track is played again and if you rewind it when the track has been played for less than 5 seconds, the previous track is played.*

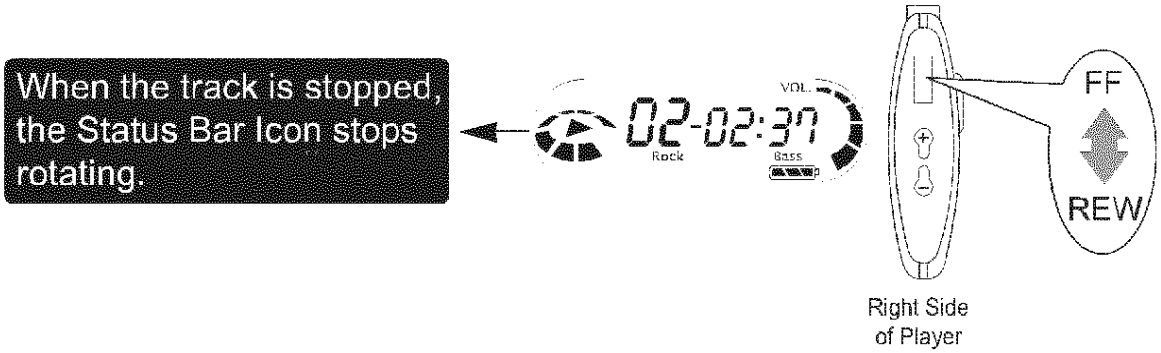

F. To Fast-Forward or Rewind Through a Current Track

1. In **Play Mode**, pull up and hold the **<Multi-Function Jog>** button to Fast-Forward through a track that is currently being played.
2. When the end of the track is reached during a Fast-Forward Search, the irock!™ digital audio player returns to the **Stop Mode**.
3. In **Play Mode**, push down and hold the **<Multi-Function Jog>** button to Rewind through a track that is currently being played.
4. When the beginning of the track is reached during a Rewind Search, the irock!™ digital audio player returns to the **Stop Mode**.